


Base Cabinet Filler


Installation Instructions

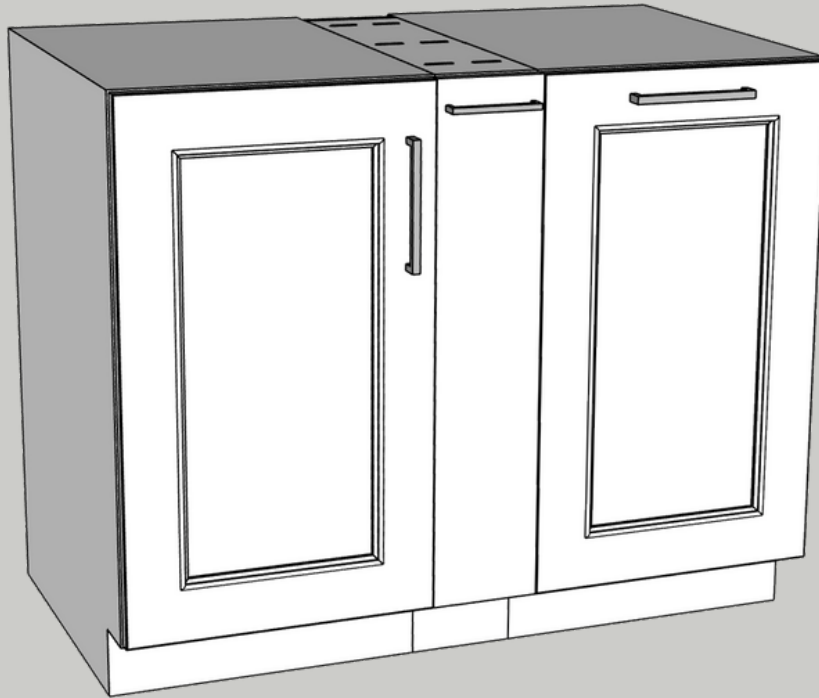


Published on May 15, 2025.




Tools

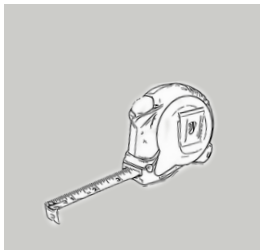

Tape Measure

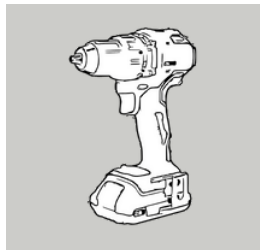

Drill

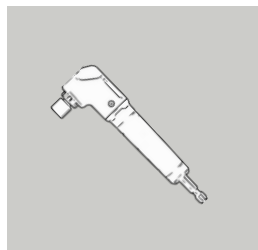


Right Angle Drill
Attachment


Be strong and courageous.
Do not be frightened, and do
not be dismayed, for the Lord
your God is with you wherever
you go.

- Joshua 1:9

Parts and Hardware (included)

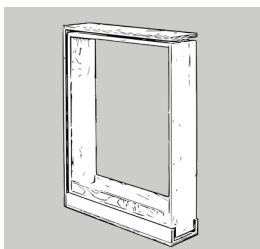

Frame + Sliding
Organizer

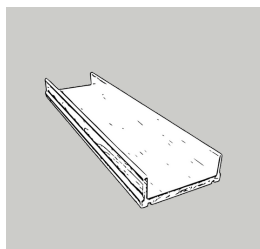

Shelf x 2




Shelf Peg x 9

1691 OH-39
Sugarcreek, OH 44681
(330) 852-3610
centurymade.com



Step 1 | Build and install the support box.

Step 1.1 | Measure the cabinets.

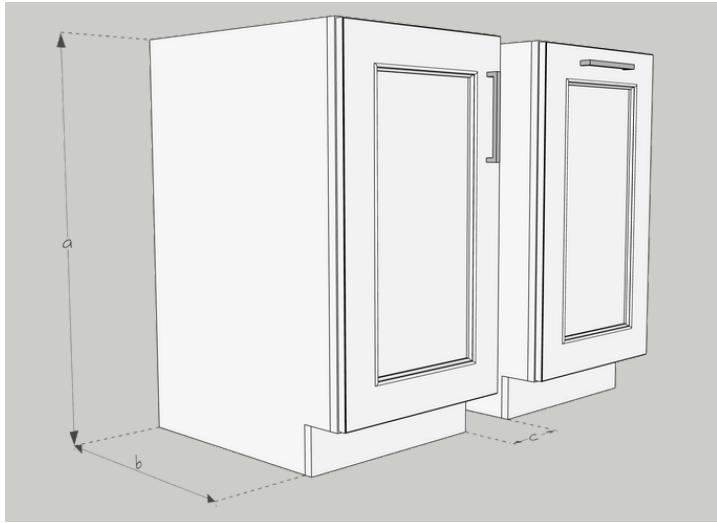

- Find these measurements:



a) height of cabinets




b) depth of cabinets







c) distance between cabinets


Note: Measure the depth of the cabinets from the back of the toe kick as shown.

Step 1.2 | Calculate the support box's dimensions.

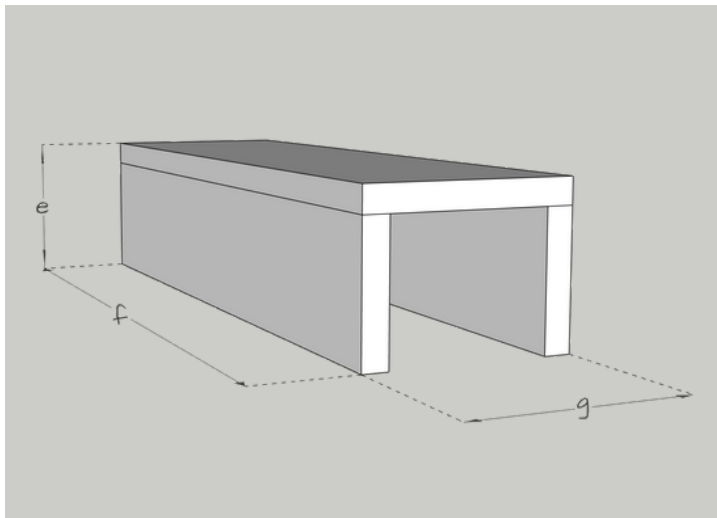

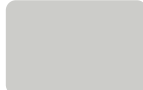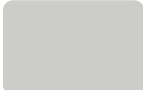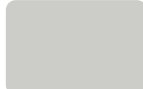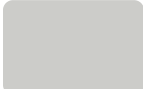	-		=	
a) height of cabinets	minus	d) height of base filler	equals	e) height of box
	=			
b) depth of cabinets	equals	f) depth of box		
	=			
c) distance between cabinets	equals	g) width of box		


Step 1.3 | Build and install the support box.

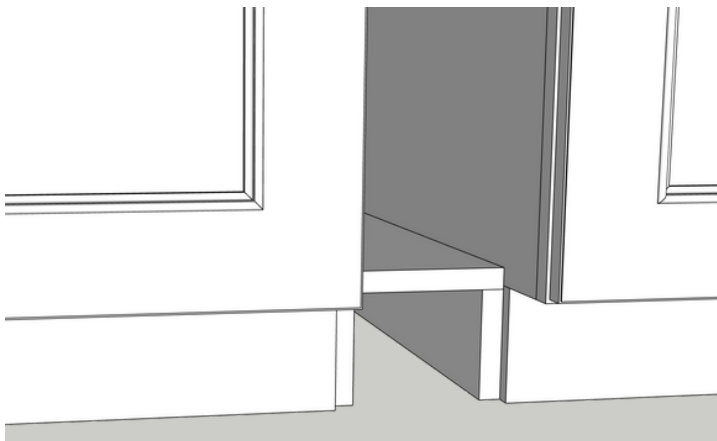

- Support Box Side A**
 - Position the side against the cabinet. Make sure it is set back to allow space for the toe kick.
 - Attach the side to the cabinet by inserting three screws (not included).
- Support Box Side B**
 - Repeat the same steps.
- Support Box Lid**
 - Attach the lid to the support box sides.


Face Frame Application (for frameless, continue to page 4)

Step 2.1 | Install the base filler.

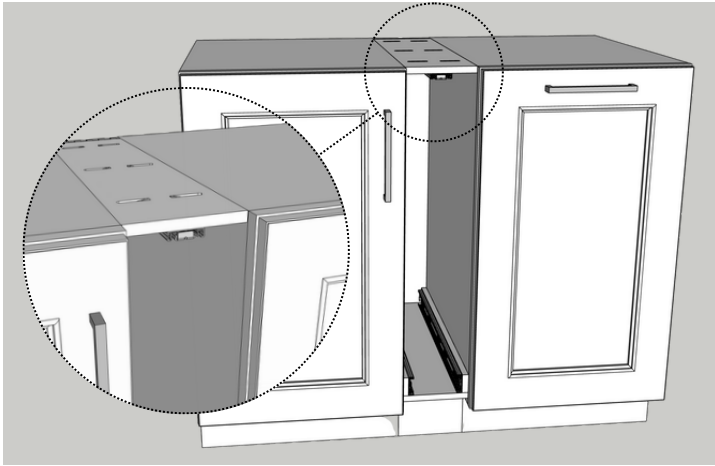


- Position the base filler behind the face frames of the surrounding cabinets as shown.
- Insert six screws (not included) into the pocket holes on the top of the frame.
- Remove the sliding organizer.
- Insert three screws (not included) through the floor of the base filler frame and into the support box.

Step 2.2 | Adjust the slide rails.

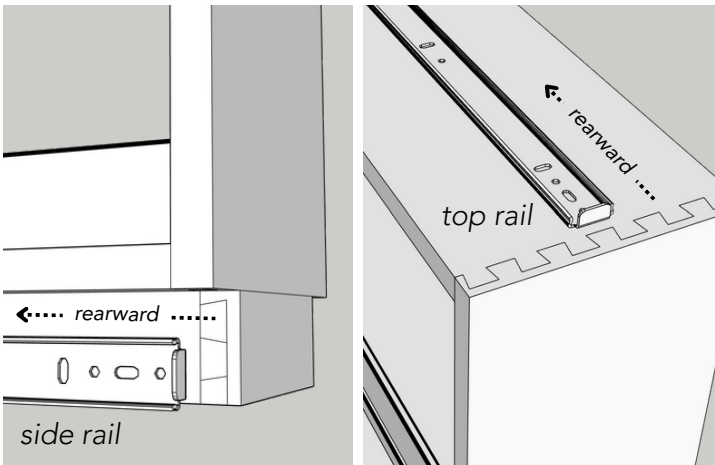

- Remove the screws from the slide rails on the top and sides of the sliding organizer.
- Move the rails rearward the same distance as the thickness of the face frame.
- Reinsert the screws.

Step 2.3 | Make and install the face frame.

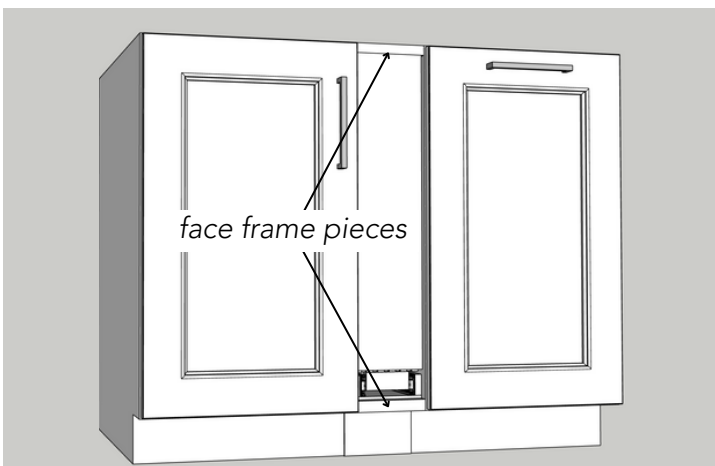


- Make top and bottom face frame pieces to match the surrounding cabinets.
- Install the face frame pieces on the front of the base cabinet filler.

Continue to Step 3 on page 4.

Frameless Application


Step 2 | Install the base filler.

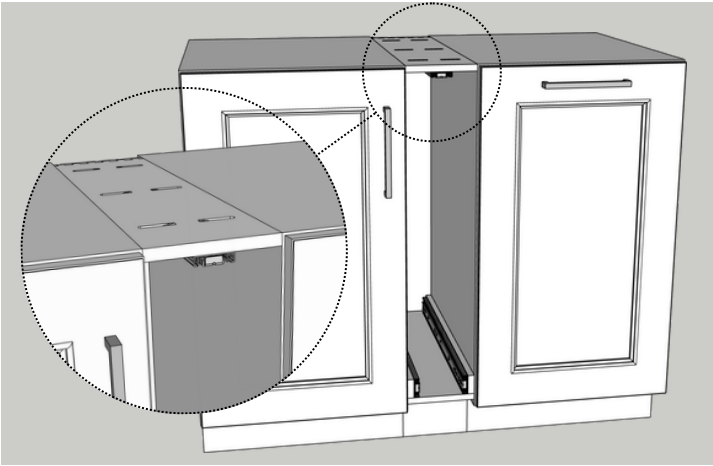

- Position the base filler flush with the front of the surrounding cabinets as shown.
- Insert six screws (not included) into the pocket holes on the top of the frame.
- Remove the sliding organizer.
- Insert three screws (not included) through the floor of the base filler frame and into the support base.


Both Face Frame and Frameless continue with Step 3 below.

Step 3 | Make and install the toe kick.

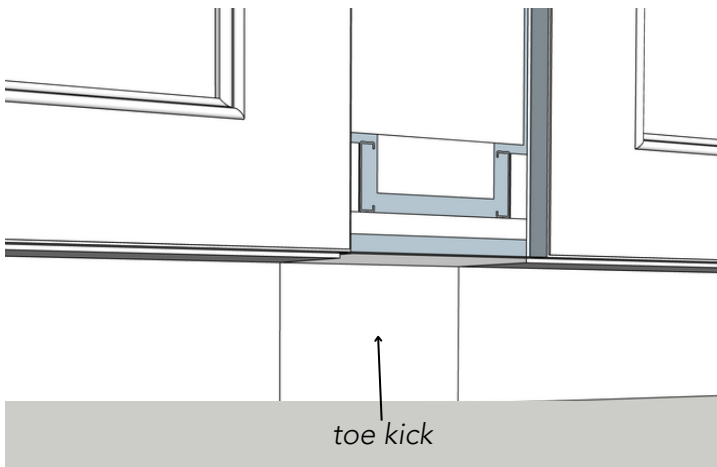

- Make a toe kick that matches the toe kick on the surrounding cabinets.
- Fasten the toe kick to the support box.

Step 4 | Make and install the cabinet door.

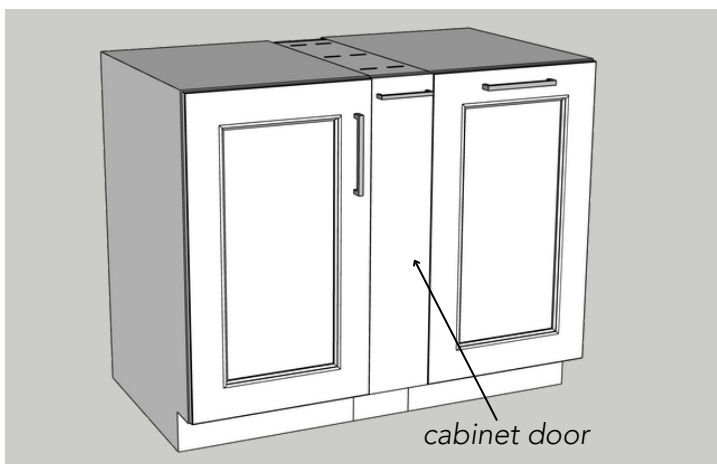

- Make a cabinet door that matches the overlay pattern of the surrounding cabinets.
- Fasten the cabinet door to the sliding organizer.