


MagnaBase

Installation Instructions

Last updated on April 23, 2025.


Tools

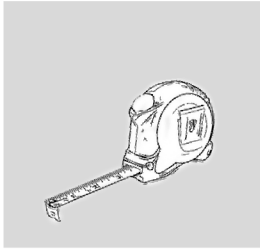


Tape Measure



Table Saw

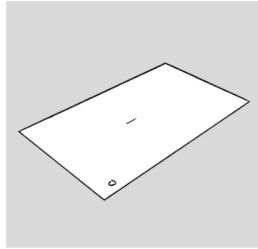


MagnaBase

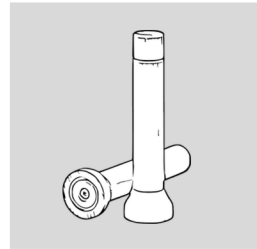

Magnetic Pegs


Parts and Hardware

Step 1 | Measure the MagnaBase.

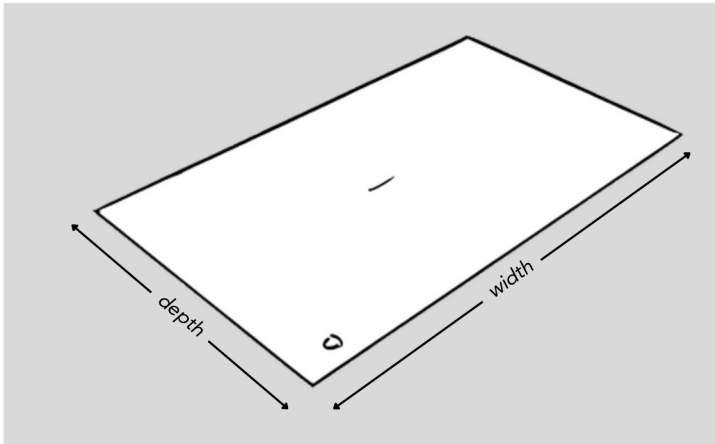

- Use a tape measure to find the width and depth of the MagnaBase.

Step 2 | Measure the deep drawer.

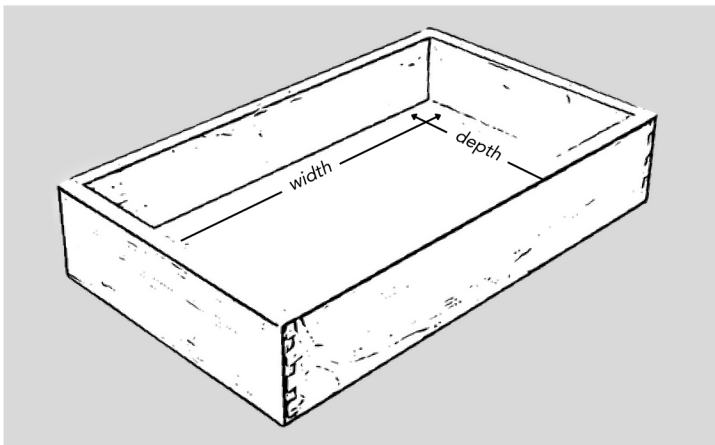


- Use a tape measure to find the width and depth of the interior of the deep drawer.

Step 3 | Calculate your trim amounts.




Step 4 | Trim the MagnaBase.

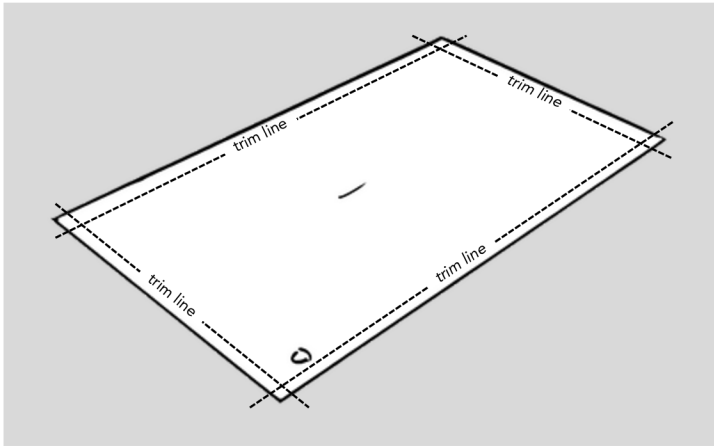

WARNING: There is a steel plate inside the MagnaBase. Before making cuts, look for the guidance stickers on the product.

- Position the MagnaBase face-up on the table saw.
- Trim off the calculated trim amounts from the left, right, front and back sides of the MagnaBase.

Step 5 | Install the MagnaBase.

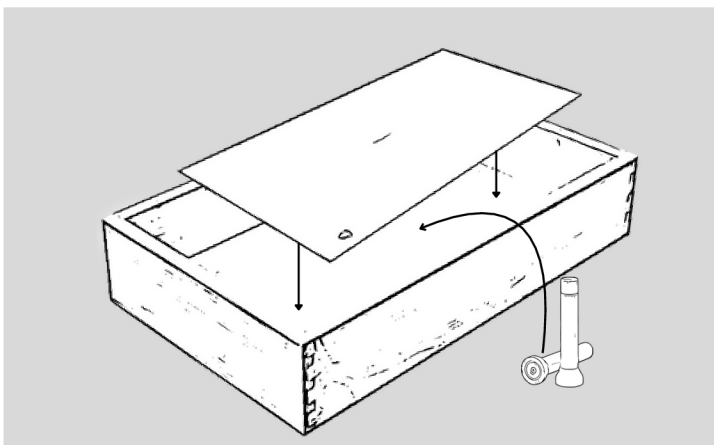

- Position the MagnaBase inside the deep drawer.
- Place the magnetic pegs on the MagnaBase. (The end user will configure them later.)