


Pantry Organizer

Installation Instructions

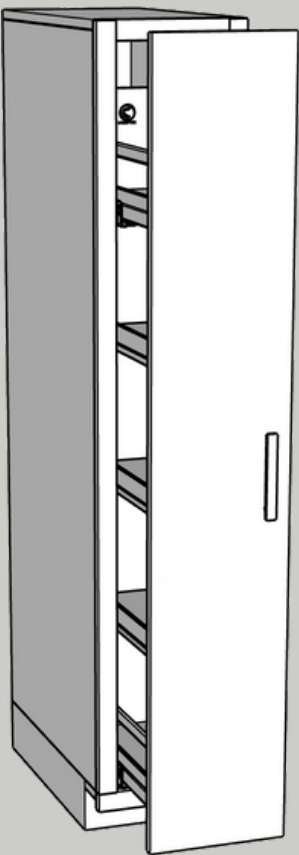

Published on September 2, 2025.



Product Code	MOW (in)	W (in)	H (in)	D (in)
*PO70-55PF	7.5	7.375	55	21.5
*PO80-55PF	8.5	8.375	55	21.5
*PO100-55PF	10.5	10.375	55	21.5
*PO110-55PF	11.5	11.375	55	21.5
*PO140-55PF	14.5	14.375	55	21.5

Available in these collections/material options:

- SIG | Signature Maple
- RIV | Riviera Walnut
- ALI | Alina White Oak
- WCC | Walnut Creek Collection (maple with walnut highlights)


Be strong and courageous.
Do not be frightened, and do not be
dismayed, for the Lord your God is
with you wherever you go.

- Joshua 1:9


1691 OH-39
Sugarcreek, OH 44681
(330) 852-3610
centurymade.com




Tools

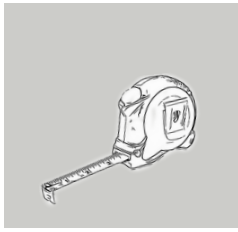


Tape Measure

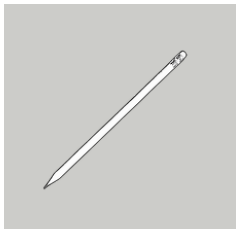


Pencil

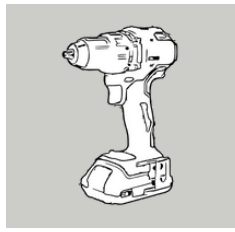


Drill

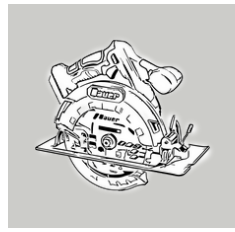

Saw

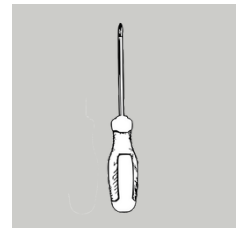


Philips
screwdriver

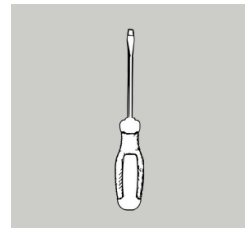


Flathead
screwdriver


Parts

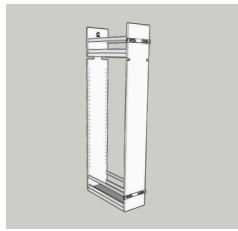

(1) Pullout frame

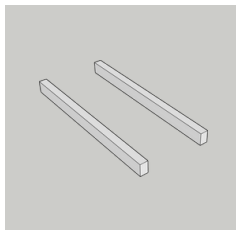


(2) Pieces of
blocking

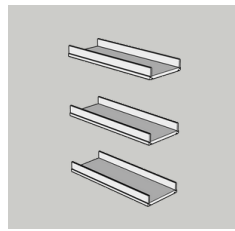


(3) Adjustable
height shelves


Hardware (included)

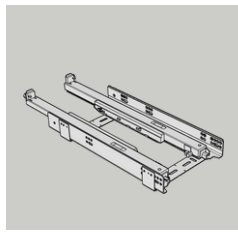


(1) Slide
undercarriage kit

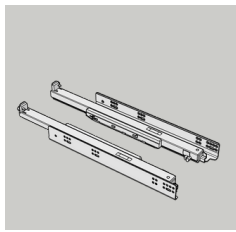


(1) Set of top
slides

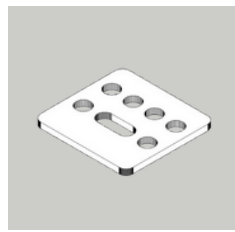


(4) Spacers
(for frameless)

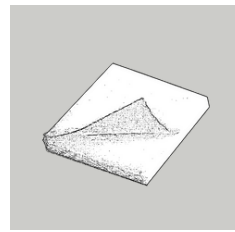

(4) Double stick
squares

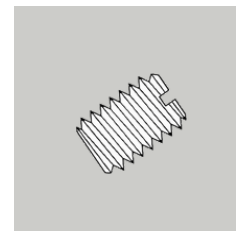

(4) Tilt screws

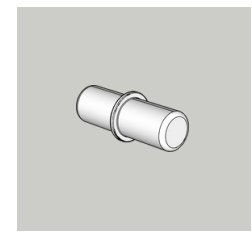


(13) Shelf pins


Hardware (not included)



(28) #8 washer-
head screws
(for slides)

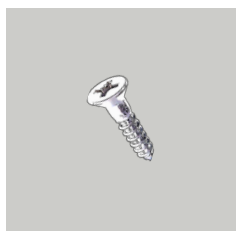


(4) Wood screws
(for blocking,
framed only)

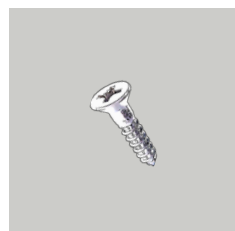

(4) Wood screws
(for door front)

Step 1 | Install the slide kit.

Step 1.1 | Mark the center of the cabinet opening.

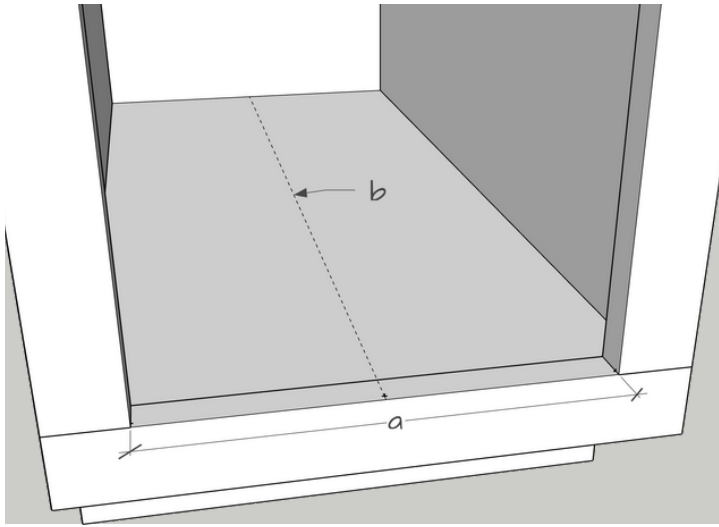


- Find these measurements:

$$\boxed{\text{a) width of opening}} \div 2 = \boxed{\text{b) center of opening}}$$

divided by two equals


- Mark the center of the cabinet opening.

Step 1.2 | Mark the slide setback.

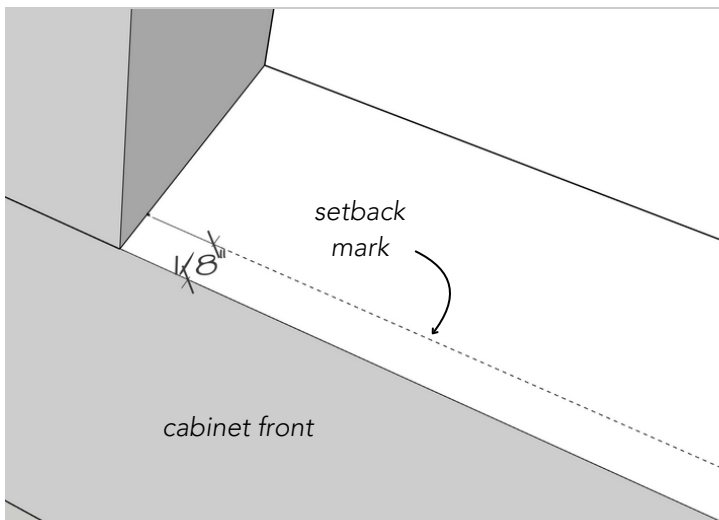

- Measure 1/8" back from the front of the cabinet box.
- Mark the setback.


Step 1.3 | Fasten the slide kit.

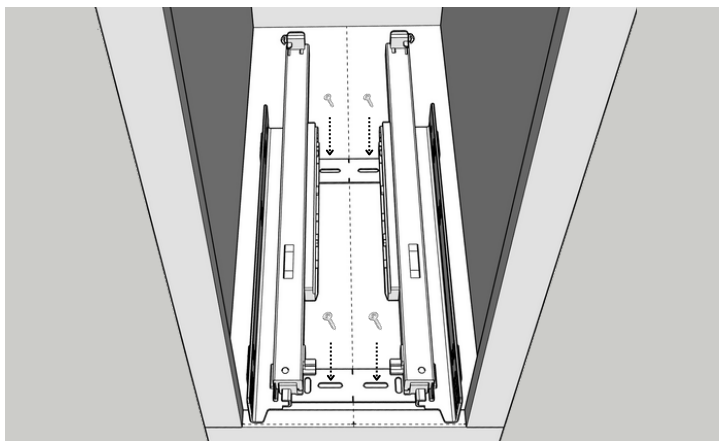

- Line up the center marking on the slide undercarriage kit with the center of the opening.
- Line up the front of the slide undercarriage kit with the 1/8" setback mark.
- Insert four #8 washer-head screws (not included) as shown.

Step 2 | Install the top slides (Framed).

Step 2.1 | Prep the blocking.

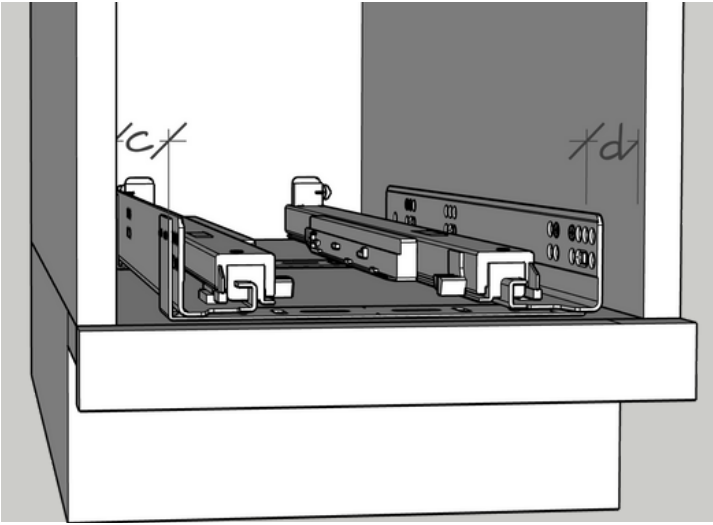

- Measure the distance between each wall and the slide undercarriage kit.




- Cut the pieces of blocking to the right widths to fill the gaps.

Pro Tip


Cut yourself a 45-1/2" piece of wood to use as a jig for the next step.

Step 2.2 | Install the blocking.

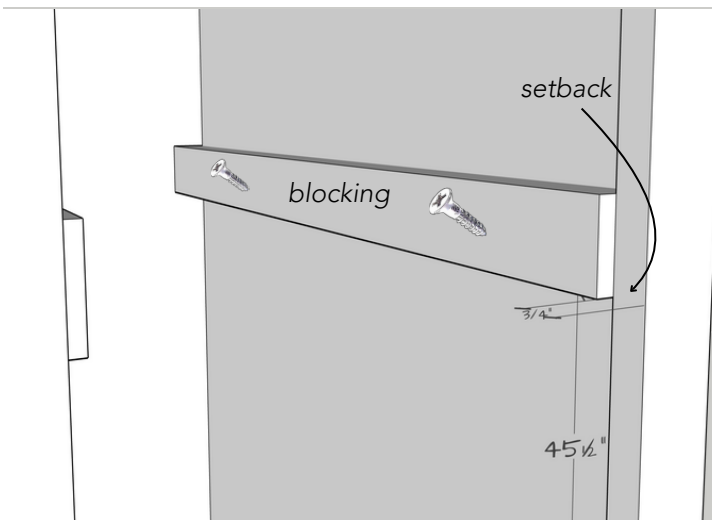

- **Mark the setback and height.**
 - Measure 3/4" back from the front of the cabinet box and mark the setback.
 - Measure 45-1/2" up from the floor of the cabinet and mark the heights.
- **Position and fasten the blocking.**
 - Line up the front of each piece of blocking with its 3/4" setback mark.
 - Line up the bottom of each piece of blocking with its 45-1/2" height mark.
 - Fasten each piece of blocking with two wood screws (not included).


Step 2.3 | Install the top slides.

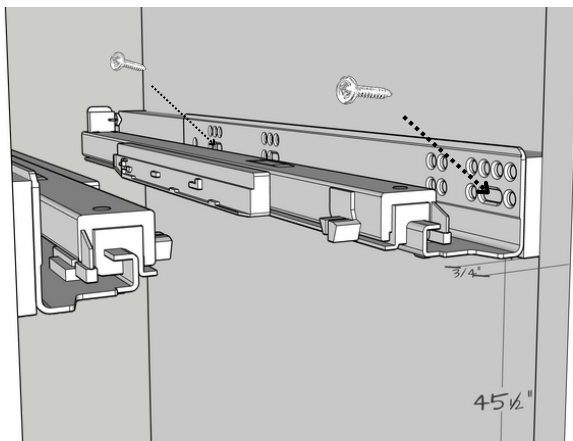

- Line up the front of each slide with the front of its piece of blocking.
- Line up the bottom of each slide with the bottom of its piece of blocking.
- Fasten each slide with two #8 washer-head screws (not included).

Step 2 | Install the top slides (Frameless).

Step 2.1 | Attach the spacers to the slides.

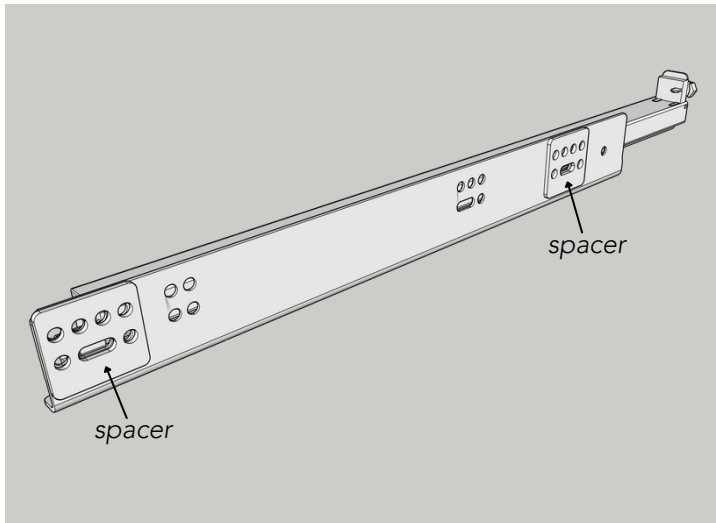


- Remove the adhesive backing from the spacers.
- Adhere two spacers to each slide. Make sure the holes line up.

Pro Tip


Cut yourself a 45-1/2" piece of wood to use as a jig for the next step.

Step 2.2 | Measure and mark the setback and height.

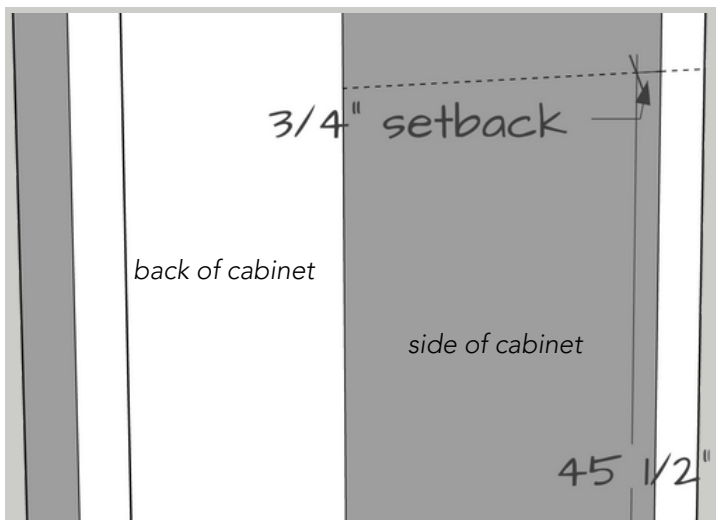

- **Mark the setback.**
 - Measure 3/4" back from the front of the cabinet box and mark the setback.
- **Mark the slide height.**
 - Measure 45 1/2" up from the floor of the cabinet and mark the height.


Step 2.3 | Install the top slides.

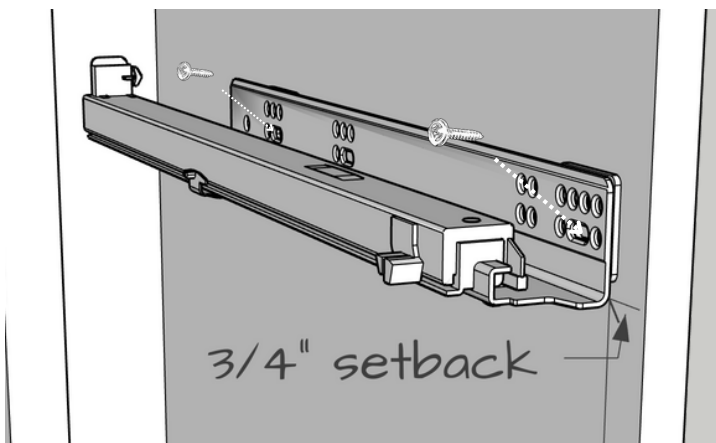

- Line up the front of each slide with the 3/4" setback mark.
- Line up the bottom of each slide with the 45-1/2" height mark.
- Fasten each slide with two #8 washer-head screws (not included).


Step 3 | Finalize the slides.

Step 3.1 | Attach the frame to the slides.

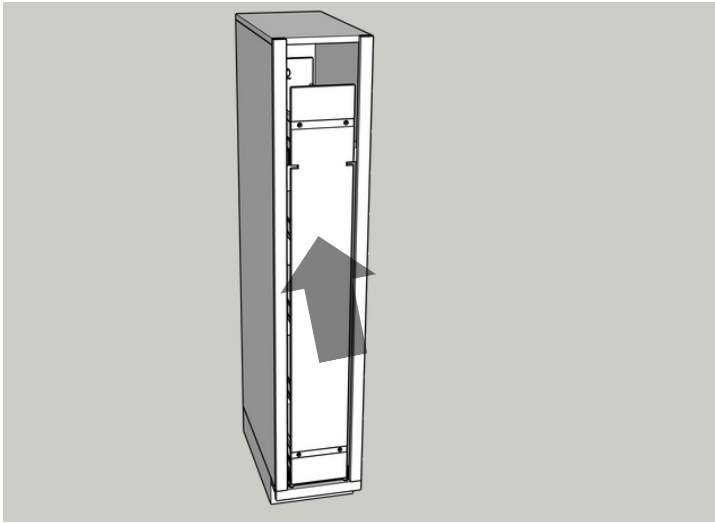


- Insert the frame onto the slides.
- Push the frame inward until the slide catches engage.

Step 3.2 | Test and adjust the slides.

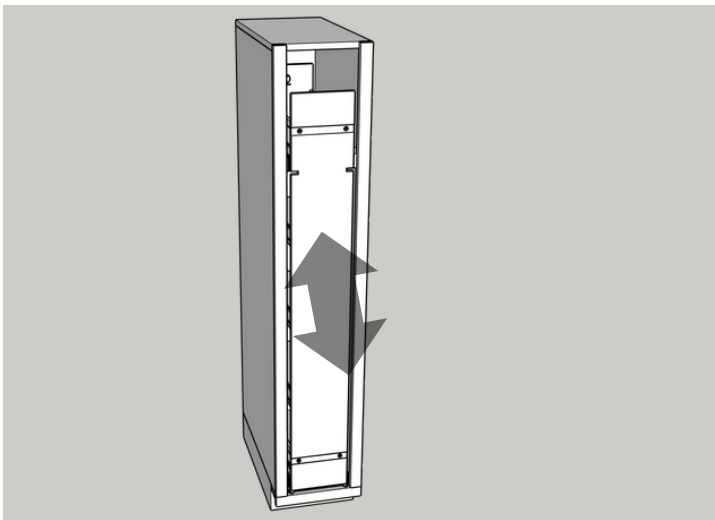

- Open and close the pullout several times while checking for a smooth sliding motion.
- If necessary, remove the frame from the slides and make adjustments to the slide positions.


Step 3.3 | Secure the slides.

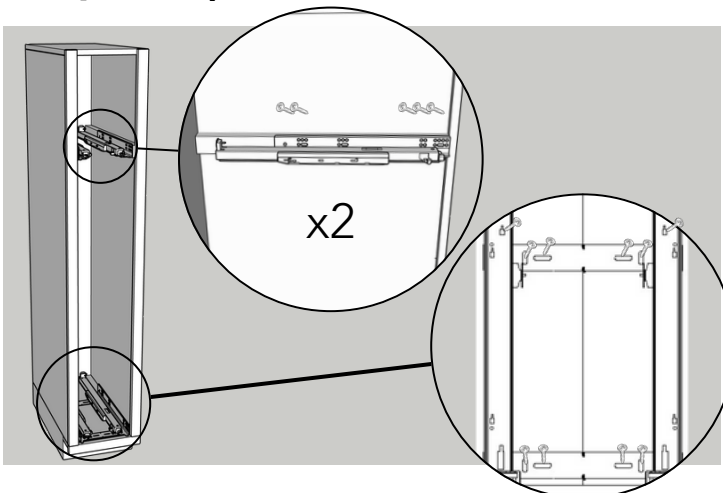

- Once the slides are properly installed, remove the pullout from the slides.
- Finish installing the slides with twenty #8 washer-head screws (not included).
- Reattach the pullout to the slides.


Step 4 | Install the door front.

Step 4.1 | Prep the frame for door front installation.

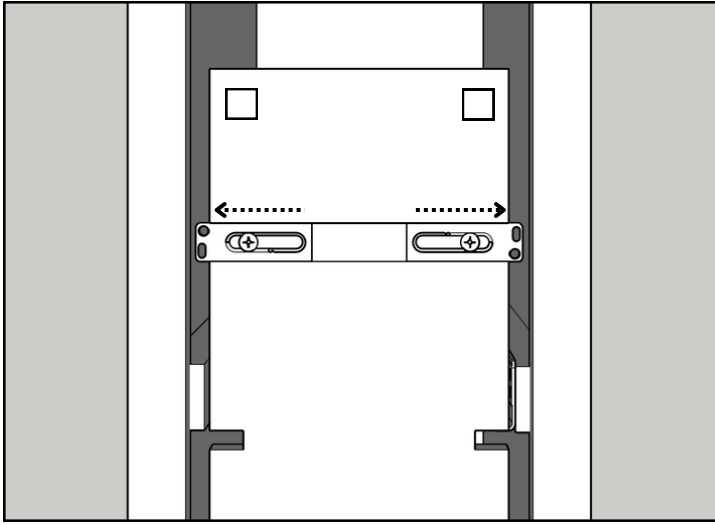


- **Extend the door-mount brackets.**
 - Loosen the four door-mount brackets using a Phillips screwdriver.
 - Slide the brackets outward far enough to expose the screw holes.
 - Retighten the screws to hold the brackets firmly in place.
- **Apply a double-stick square to each corner of the frame's front.**

Step 4.2 | Position and fasten the door front.

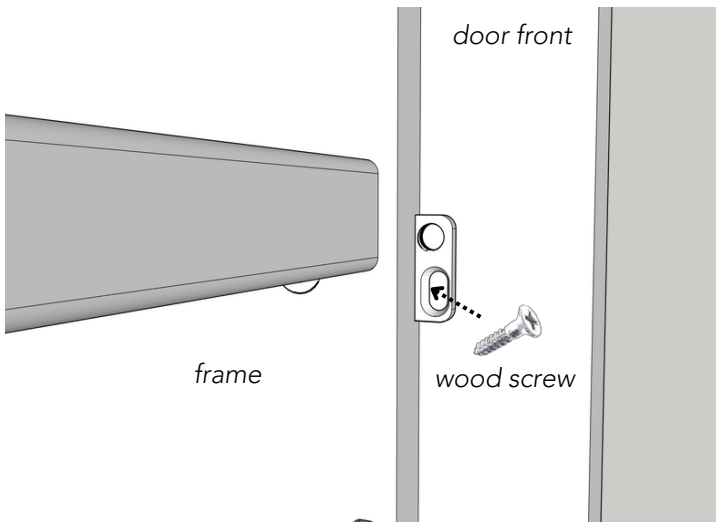


- **Position the door front.**
 - Position the door front onto the frame so it matches the door style of the rest of the cabinets.
 - Press the door front firmly to adhere it to the double-stick squares.
- **Attach the door front to the frame.**
 - Insert a wood screw (not included) through each bracket.

Step 4.3 | Test and adjust the door front.

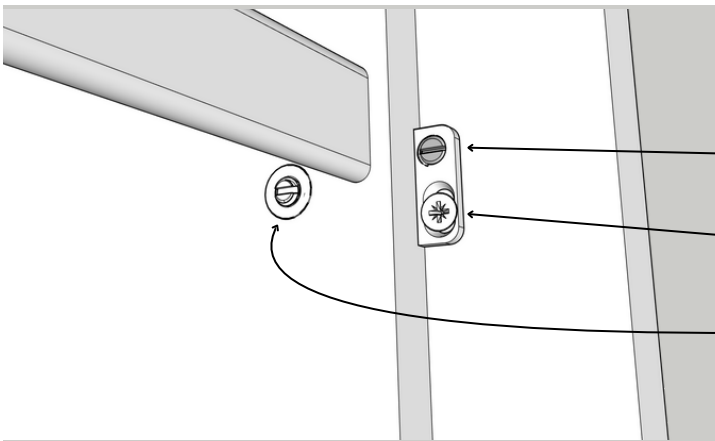

- Open and close the pullout several times while checking for alignment.
- Make fine adjustments as needed:
 - **Tilt:** Insert and adjust tilt screws to correct angle issues with the door front.
 - **Height:** Loosen the fastening screws, reposition, then retighten.
 - **Side to Side:** Loosen door-mount bracket screws with a flathead screwdriver, reposition, then retighten.

Step 5 | Install the adjustable shelves.

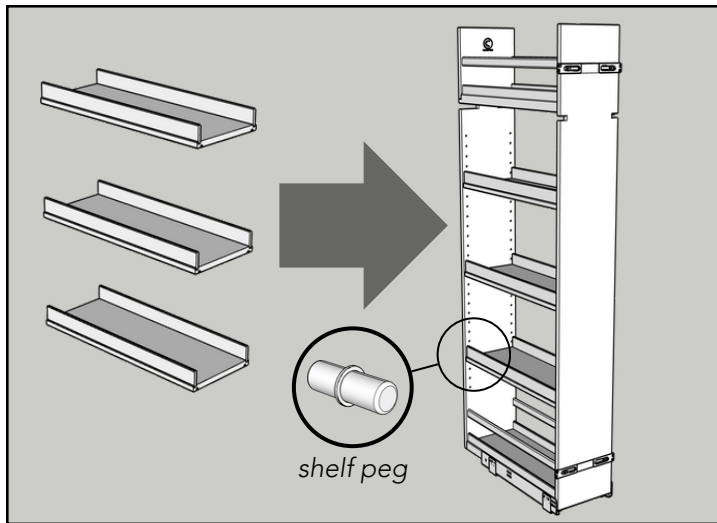

- Insert the shelf pegs.
- Insert the shelves.


Pro Tip

If you want to space your shelves evenly, place the pegs in these holes (counting from bottom to top): 5, 13, 22.

Presenting:

MagnaBase

deep drawer organizer

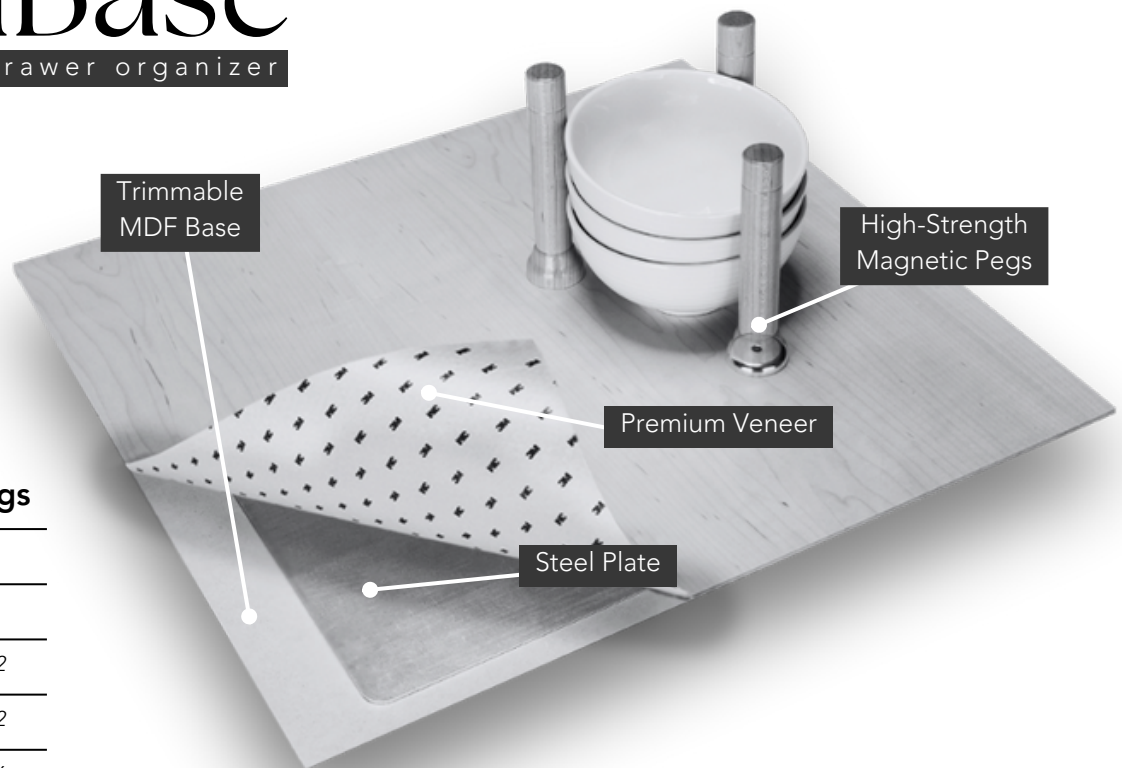

SKU	W (in)	Pegs
MAGBASE21PF	18-21	8
MAGBASE27PF	24-27	8
MAGBASE30PF	27-30	12
MAGBASE33PF	30-33	12
MAGBASE36PF	33-36	16
MAGBASE39PF	36-39	16

